HOZARD

Manual

HVD-1

Video Doorbell

Security Smart Doorbell




Before using this product, please read the instructions carefully, which is for reference only, The specific operation is subject to the physical object.

I. Appearance introduction



Indoor display

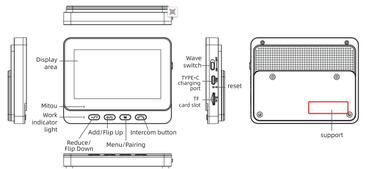

II. The Doorbell is paired with an indoor display:



1. Push the indoor display dial switch to "ON", long press "M" key, the display shows "connect.....30", which goes into the pairing mode.
2. At the same time, long press the doorbell button, the work indicator light flashing.
3. Indoor display displays "Connect.....√" is a successful pairing.

III. Function and key use instructions

Icon	Illustrate	Icon	Illustrate
M	Short press menu /long press pairing		Connection signal strength
	Long press to talk /short press to sleep		Intercom volume
-/▼	Turn down/Reduce	TX	Doorbell battery
+/▲	Turn up/Increase	RX	Monitor power
	Photo Files	W	Intercom icon
	Video File	Disconnect	Not paired/Doorbell sleeping
	Ringtone Selection	Pairing....21	Pairing
	Set Up	Pairing....√	Pairing Successful

1. M Key function:

1.1. Long press "M" to enter the pairing mode

1.2. Tap to enter t e Menu Settings. In Menu mode, click to return to the previous page.

2. Keynote

2.1. When the visitor rings the doorbell, the indoor unit will wake up and ring. Press "" once to answer the call, long press "" intercom, and press again to hang up,The indoor unit and outdoor doorbell will go to sleep at the same time.

2.2. In hibernation mode, press and hold Indoor Monitor to power on and access menu Settings.

2.3. In menu mode, click "" to confirm the setting.

3. - / ▼, + / ▲ functions:

3.1. In the video interface, press the "- / ▼" key to reduce the intercom volume, and press the "+ / ▲" key to increase the volume.

3.2. Menu interface, press "- / ▼" to enter the next option or reduce the volume / brightness; press "+ / ▲" to enter the previous option or increase the volume / brightness.

4. Menu function:

4.1. Photos: ring the doorbell, the indoor display automatically captures the photos. The system can save the photos, cycle coverage, and save the latest photos.

4.2. Video recording: This function requires inserting the SD card, ringing the doorbell, the display will automatically open the video recording, cycle coverage, and save the latest video recording.

4.3. Ring tone setting: optional ding Dong music.

4.4. Settings:

Language: Press the -/▼, +/▲ keys to select the language, and press "" to confirm;

Brightness: Press the -/▼, +/▲ keys to adjust the screen brightness;

Ring volume: Press -/▼, +/▲ to adjust the ring volume;

Version number: production firmware version number;

Time setting: Press -/▼, +/▲ to adjust the time value. Press the "" key to enter the next setting. After all settings are completed, press "M" to return to save the settings.

IV、Installation Site:

The doorbell supports two installation methods, 3M force glue fixing and screw fixing, installed on the door or smooth wall; when the doorbell is low power, can be removed for charging.

Indoor display is plugged in for a long time, placed on the easily charged desktop or suspended on the wall; the device has built-in lithium battery for emergency use of power failure. Walls, Windows, metal doors, etc. will weaken the signal strength, please try to install the equipment within the strong signal range.

V、Matters Need Attention:

- The device is a low-power doorbell. When no one presses the doorbell, the device enters the dormant standby mode.
- Walls, Windows, metal doors, etc. will weaken the signal strength, please try to install the equipment within the strong signal range.
- Before use, pair the doorbell with an indoor display and install it in a valid area.
- If the monitor is too close to the doorbell, it produces echoes, keep them away or lower the volume and the noise will disappear.
- The applicable working temperature of this product is-10°C~50°C. Do not use this product under too high or too low temperature.
- This product is a precision electronic product. Do not use this product in the environment of excessive moisture or water that may cause water to enter the product, so as not to affect the normal use.
- In order to better use this product, the front and side of the lens close to the glass, white wall and other reflective objects, so as not to cause the picture near bright, distant dark or white phenomenon.

FIND MANUAL